



# NOAA FISHERIES

## Cellular Electronic Logbook Program


Tab D, No. 4(b)

### SD Card Removal Instructions

1. Disconnect the power cord to power down the cellular electronic logbook (cELB) and safely remove the SD card without damaging the device.
2. The SD card is inserted in a slot in the front of the cELB. If your cELB is enclosed in the blue Pelican case that we provided, you may need to remove it to reach the SD card being sure to note where the antenna and power cables are attached. (See photos below).



RF Antenna GPS Antenna Power Cable

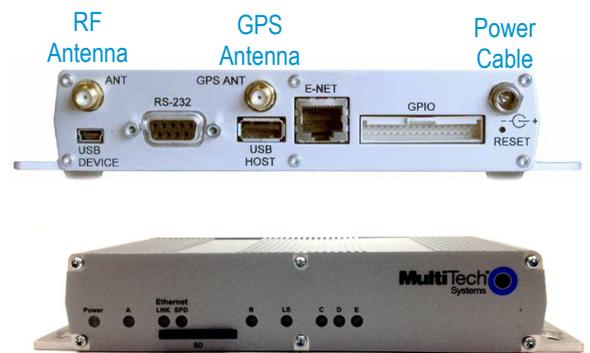

SD Card

3. The SD card is “spring loaded”. Use the tip of your finger or fingernail to gently press in on the edge of the blue card. It should pop slightly out. Pinch between your fingers and remove completely.



4. Remove the new SD card from the plastic case and insert in the slot. The label should be facing down and the gold strip should be facing up. The notched edge should be on the left side. The SD card should “click” into place and none of the blue card should be sticking out.



5. Place the old SD card in the plastic case and put inside the postage paid addressed envelope included in the packet.



6. The envelope may be dropped off at your local post office or USPS Carrier Pickup can be scheduled at <https://tools.usps.com/schedule-pickup-steps.htm> (service is free as long as pickup is scheduled during normal mail delivery times).
7. Reattach the antenna cables as shown in the first diagram. The antenna cable labeled RF connects to the screw connector labeled ANT on the cELB. The antenna cable labeled GPS attaches to the screw connector labeled GPS ANT on the cELB.
8. Replug the power cord into the cELB to power up the unit again.
9. If you need further assistance, please contact Rebecca Smith via email at [rebecca.smith@noaa.gov](mailto:rebecca.smith@noaa.gov). We will be happy to assist.